



B7L Explosion Figure Parts List

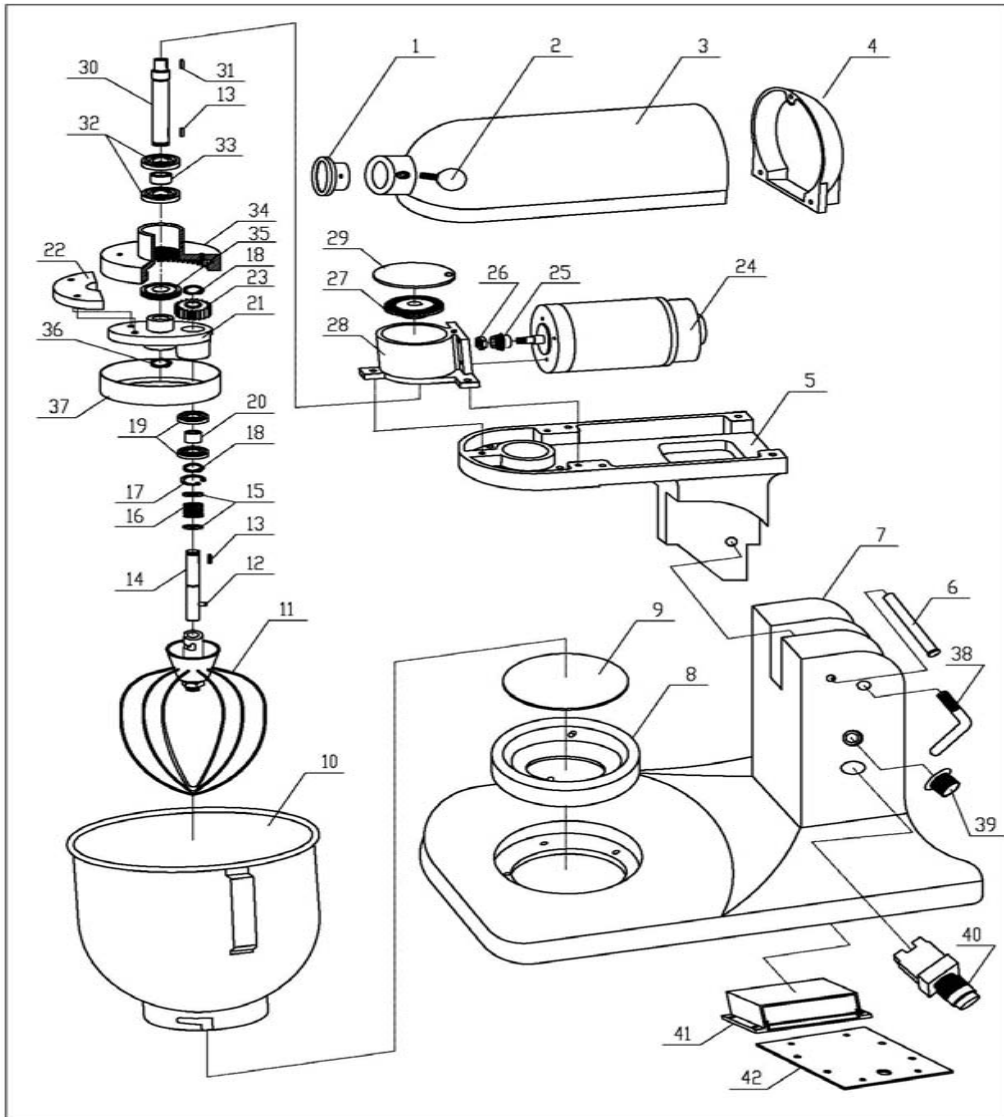

ITEM	NAME	CODE	QTY
1	Front cover	B7LB-01	1
2	Front cover lock handle	B7LB-02	1
3	Top cover	B7LB-03	1
4	Rear cover	B7LB-04	1
5	Horizontal plane	B7LB-05	1
6	Pin	B7LB-06	1
7	Pedestal	B7LB-07	1
8	Bowl base	B7LB-08	1
9	Bowl gasket	B7LB-09	1
10	Bowl	B7LB-10	1
11	Whip	B7LB-11	1
12	Round pin	φ4×16	1
13	Flat key	A4×10	2
14	Planet pinion shaft	B7LB-12	1
15	Spring collar	B7LB-13	2
16	Spring	B7LB-14	1
17	Hole with elastic ring	21	1
18	Shaft with elastic ring	12	1
19	Bearing	61801	2
20	Shaft sleeve	B7LB-15	1
21	Eccentric block	B7LB-16	1
22	Balance of iron	B7LB-17	1

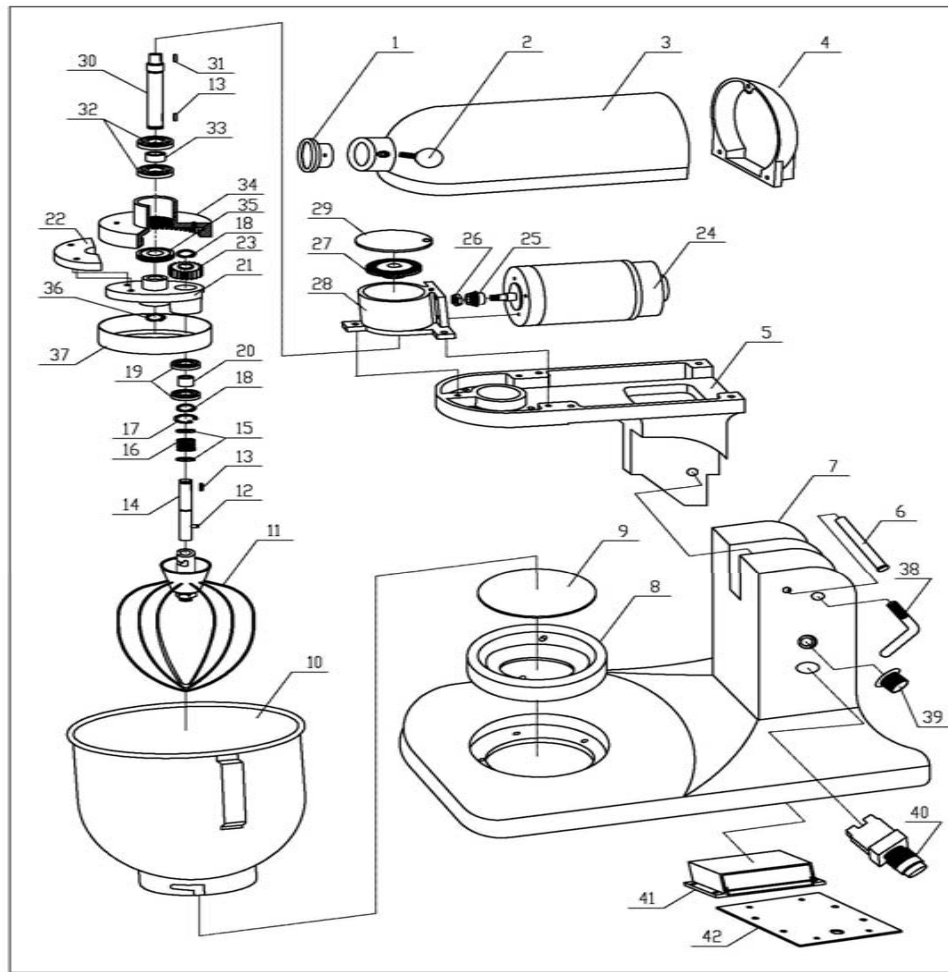

23	Planet wheel	B7LB-18	1
24	Motor	B7LB-19	1
25	Driving bevel gear	B7LB-20	1
26	Nut	M8	1
27	Passive bevel gear	B7LB-21	1
28	Gear box	B7LB-22	1
29	Sealing cover	B7LB-23	1
30	Principal axis	B7LB-24	1
31	Flat key	A3×10	2
32	Bearing	202	2
33	Shaft sleeve	B7LB-25	1
34	Internal gear	B7LB-26	1
35	Adjusting nut	B7LB-27	1
36	Shaft with elastic ring	15	1
37	Collecting ring	B7LB-28	1
38	Horizontal plane lock handle	B7LB-29	1
39	Speed controller	WTH(118)470K-2W	1
40	Switch	LA125D	1
41	Circuit board	B7LB-30	1
42	Electrical plate	B7LB-31	1